




# Monolith Plus


# Monolith Plus, the flagship



ComfortLight → Guide- and atmosphere light

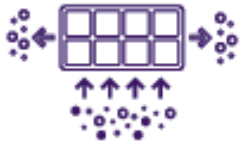

DuoFresh → Odour extraction



Soft touch activating & closed surface



# Shows you the way in the dark - Self activating ComfortLight



## Feature

- User detection and Comfortlight
- User detection range is adjustable: Far, mid and close

## Advantage

- Find the toilet in the night without completely waking up
- No extra light is needed

## Benefit

- User detection switches the light on when approaching the WC



# ComfortLight with 7 different colours

## Feature

- 7 different colours possible
- 5 colours analogue to SIGMA 80
- Additional warm white and cold white

## Advantage

- Adapt the light to your bathroom design
- Adjust your personal mood

## Benefit

- Changeable colours
- Can be changed by the end consumer



blue



turquoise



magenta



orange



yellow



warm white



white



# Integrated and intelligent - ComfortLight activation



## Feature

- Brightness sensor can decide between dark and bright and switch the ComfortLight only on in the dark (if the setting is made)
- Light turns off 5 min after last detection

## Advantage


- Intelligent and reliable
- Energy saving

## Benefit

- Light turns on only in the dark (if the setting is made)
- Light turns off after leaving



# Odour extraction - Say goodbye to bad smell in your bathroom

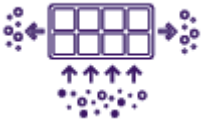

## Feature

- Integral air filtration system for odour extraction
- Short distance detection switches on the odour extraction < 50cm
- On /auto off by touching the activation button (Running time 5/10/15min)
- Efficient ceramic filter
- Long life min. 6 years

## Advantage


- More comfort – no more bad smell in the bathroom
- Fits in every bathroom, no special planning required
- Switch on automatically
- More comfort - less maintenance
- No installer needed

## Benefit

- Absorb the bad odour with a ceramic filter
- Automatic odour extraction switch on when approaching the WC



# Active visualization - Pulsing (breathing) light

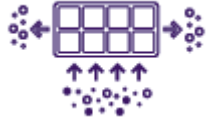

## Feature

- Visual feedback of the running odour extraction due to silent function (Sound is lower than Sigma40 or AqC 8000plus)

## Advantage

- LED at the right side of the lid is pulsating while the odour extraction is running

## Benefit

- Flash light – confirms when the odour extraction is running



# Design in perfection → Closed surface with Soft touch activation



## Feature

- Soft touch flush actuation
- Automatic odour extraction
- Automatic switch on of the ComfortLight

## Advantage

- High quality aluminium lid with closed surface
- Side fixations made from aluminium
- Integrated push button in lid with haptic stamping


## Benefit

- Beautiful design
- High quality and hygienic appearance
- Easy to flush
- No smell





# Customizable → Activating the settings



## Feature

- Every setting gives a feedback by flashing a light

## Advantage

- Settings can be made by the three buttons on the lid

## Benefit

- Self explaining settings – can be made by every installer
- End consumer can change the colours




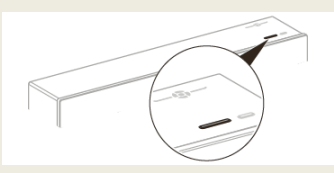

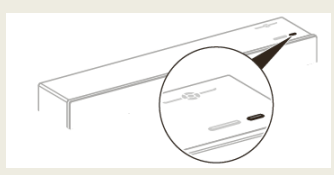

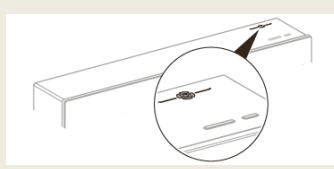




SLIDE 10  
MONOLITH PLUS  
DATE 01-01-2018

 **GEBERIT**

# It's easy to change the settings

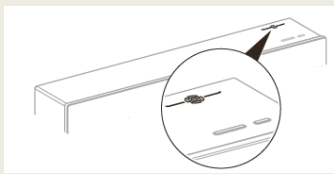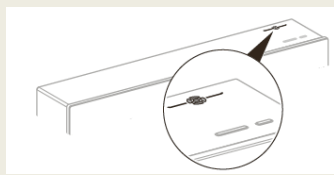Step	Picture	Action	Respons
1		Push the button « <b>odour extraction</b> » for 3 sec	The lights flashes 3 times You are in the menu and setting mode
2		Push the button « <b>odour extraction</b> » again to go to the next menu point	The odour extraction light shows which menu you have chosen 
3		Push the button « <b>large flush volume</b> » as often as you get the setting you want	The comfortLight shows which setting you have chosen 
4		Push the button « <b>small flush volume</b> » and your setting will be saved	The comfortLight flushes 
5		Push the button « <b>odour extraction</b> » for 3 sec	The lights flashes 3 times You have closed the menu and setting mode

# Which settings can be changed

Colour	Menu	Settings
White	Light colour	<u>blue</u> , turquoise, magenta, orange, yellow, warm white and white
Blue	Modus ComfortLight	blue → Switch on with sensor only when the room is dark <u>turquoise</u> → Switch on with sensor magenta → Off
Turquoise	Conditions for switching off ComfortLight	Time after which the orientation light automatically switches off when user detection is not activated: blue → 1 minute <u>turquoise</u> → 3 minute Magenta → 6 minute
Magenta	Odour extraction unit run-on time	Time after which the odour extraction unit automatically switches off: blue → 5 minute <u>turquoise</u> → 10 minute Magenta → 15 minute
Orange	Sensor distance ComfortLight	blue → short distance <u>turquoise</u> → Middle distance Magenta → Long distance
Yellow	Odour extraction	Automatic or manual starting of odour extraction unit: <u>blue</u> → Switch on when user is detected turquoise → Switch on by pressing “Odour extraction” button